


Calculating the Frame Height

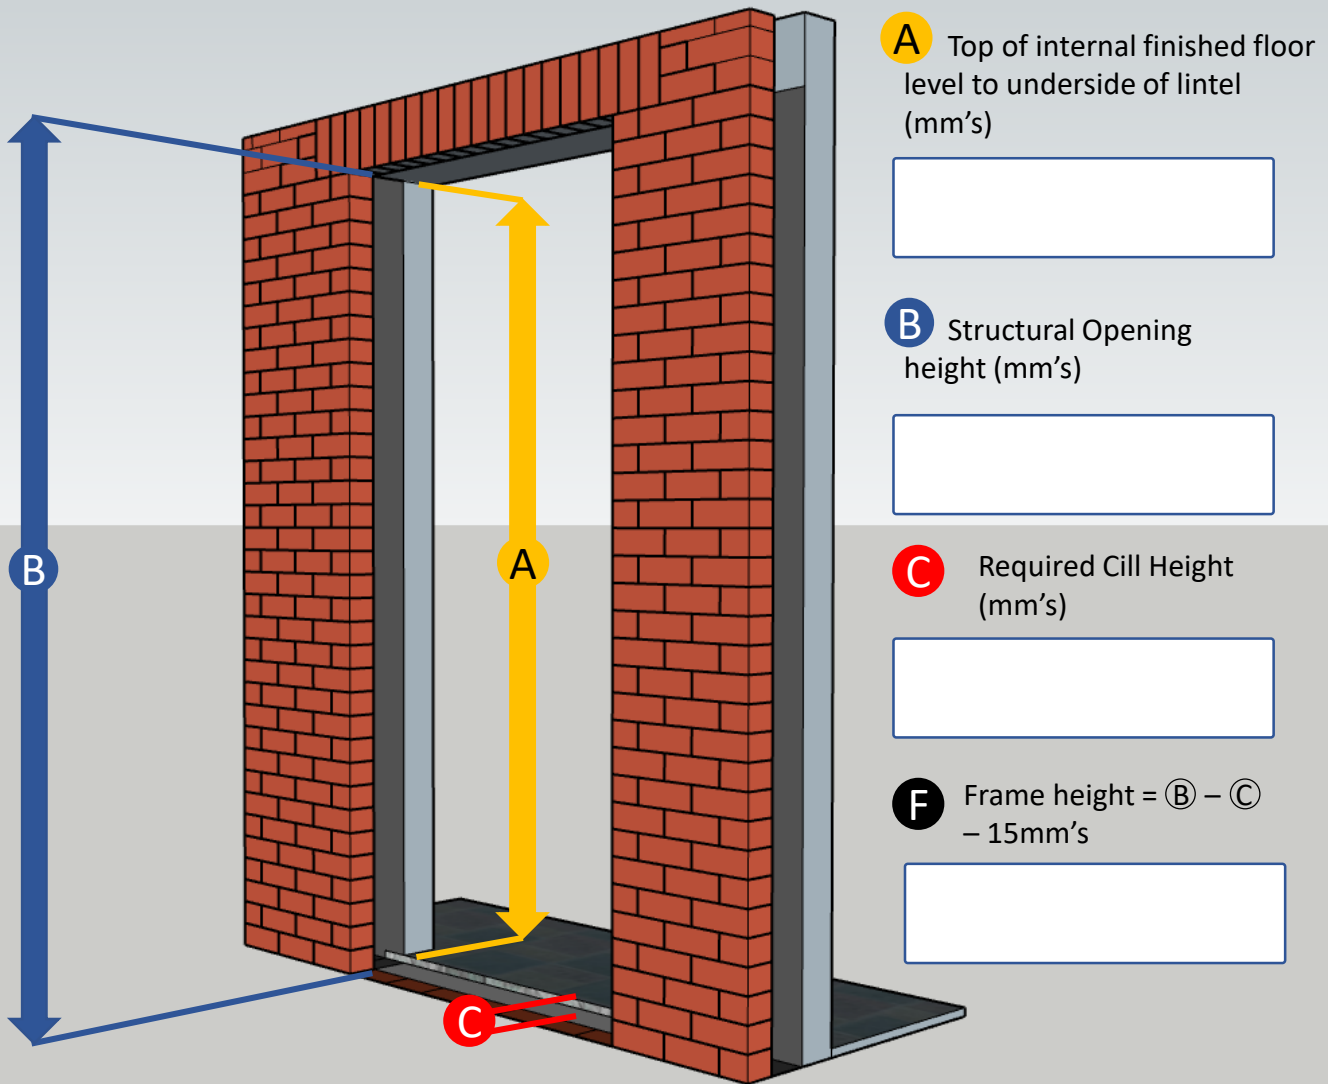

Notes:


Check Frame Height is less than measurement **A**

Take at least 3 x height measurements; one on the left side, one near the centre and one on the right.

Take the smallest/tightest height measurements to ensure your finished door will fit comfortably in the opening from the 3 x separate height measurements.

The frame height includes 15mm's tolerance to allow for a comfortable installation and ease of operation of the door.

Calculating the Frame Width

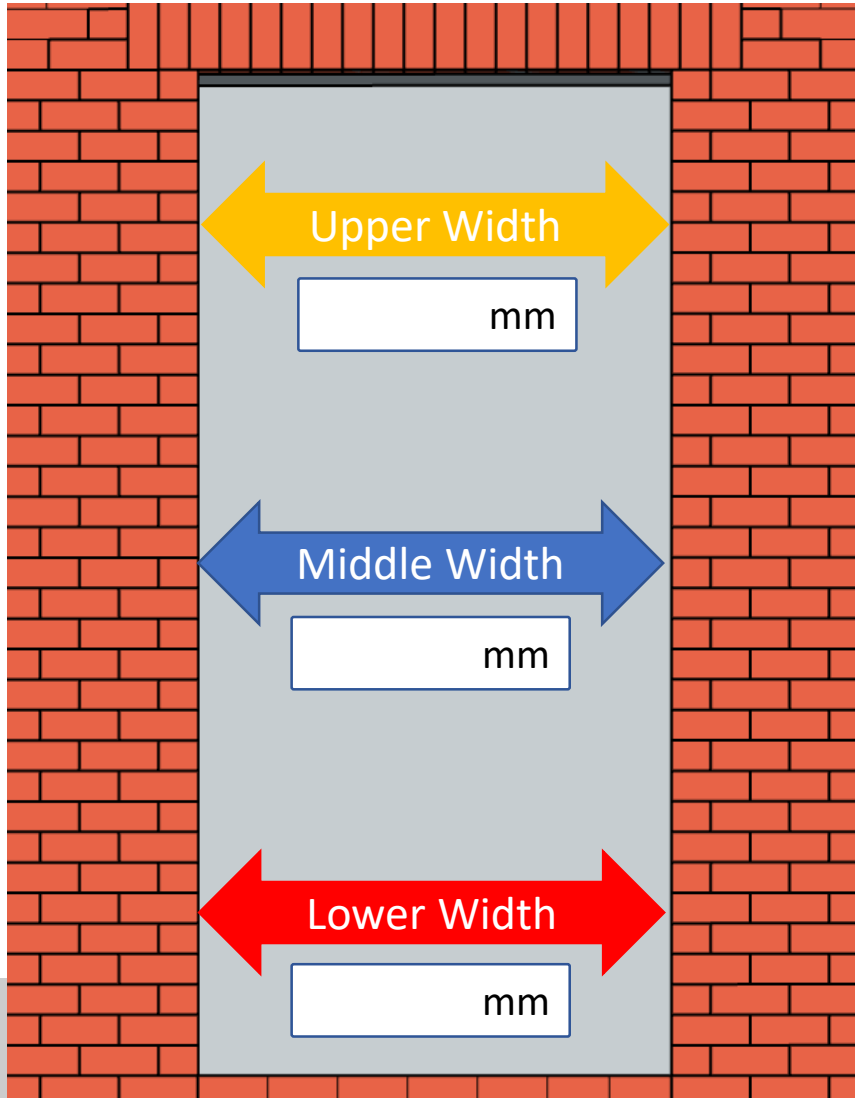

SMALLEST WIDTH:
Measured brick to brick

Minus 20mm's tolerance
(10mm's either side)

FRAME WIDTH =

Notes:

It is recommended to take measurements from both inside and outside the door opening to ensure your door will fit and be able to operate in the opening.

Take at least 3 x width measurements, ensuring you take the smallest / tightest size in the frame width calculation.

If in doubt, please take a photo of your door opening and email is to doors@dortech.co.uk, or call 03330 11 22 99 and speak with one of our engineers.